



## Measurements

### DEDUCTIONS when using a eZe Head box

<b>Keyway Tube</b>	:	Overall Width of Blind <b>LESS 75mm</b>
<b>Side Channel</b>	:	Overall Drop of Blind <b>LESS 135mm</b>
<b>eZe Bottom Rail - centre lock</b>	:	Overall Width of Blind <b>LESS 55mm</b>
<b>Finished Skin Width</b>	:	Overall Width of Blind <b>LESS 75mm</b>
<b>eZe Head Box - front &amp; back</b>	:	Overall Width of Blind <b>LESS 10mm</b>

### FINISHED SKIN CONSTRUCTION

#### TOP of finished skin

When using <b>63mm Keyway</b>	:	3.6mm Spline
When using <b>70mm Keyway</b>	:	6mm Rope / Spline
When using <b>78mm Keyway</b>	:	6mm Rope / Spline

#### BOTTOM of finished skin

<b>Channel X Bottom Rail</b>	:	6mm Rope / Spline
<b>eZe Bottom Bar</b>	:	6mm Rope / Spline

#### Clear PVC Skin


- VERTICAL JOINS ONLY - due to shrinkage up & down the roll, no shrinkage across the roll
- Both Edges of Skin (one face only) to be strengthened by Sewing or Welding a strip of Reinforced PVC (40mm is best) - this ensures tight edges when locked down

### LOCKING



#### SLIDE TONGUES

**Locking Holes** : Drill 12mm or 14mm hole inside channel

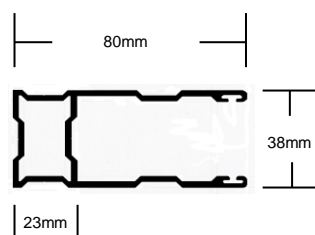

Bottom Rail

Side Channel

Universal Bracket

Reveal Mount Plate

The above Measurements & Deductions are a recommendation - to be used as a guide only